




Beam Pilot App Quickstart Guide

Basic Controls		
Speaker Volume Controls		Hover to reveal volume slider, click to mute/unmute your computer's speaker.
Microphone Volume Controls		Hover to reveal volume slider, click to mute/unmute your computer's microphone.
Zoom Controls		Hover to reveal zoom level slider, click to reset.
Digital Pan/Tilt Top View		While in top camera view, click and drag mouse to pan camera.
Pause Session		Click to pause a session for up to 15 minutes.
Beam Out		Click to end current session (while docked).
Screen Sharing - Start/Stop		Click to select a screen to share, click again to end sharing session.
Fullscreen - Start/Stop		Click to enable fullscreen mode, click again to restore to last window size.
Navigation View - Hide/Show		Click to hide navigation view (while not driving). Click again to restore.
Beam Help		Click to get assistance with using Beam.
Beam Options		Click this to change your settings, input devices, and preferences.
View Connection Health		Hover over this icon to view your current connection health (red indicates an issue).

Driving Controls	
Set Driving Speed	<p>Drag the handle left (slow) or right (fast) to adjust the max speed of the Smart Presence™ system</p> 
Keyboard Controls	Press and hold the arrow keys or WSAD to start driving. Hold Shift to go faster.
Mouse Controls	Click and drag the mouse inside the navigation view (bottom) to drive. The guides will show your predicted path and rate of speed.
Gamepad Controls	Hold down the "drive" button and use the right control stick to begin driving. The speed is determined by how far you move the stick away from center.

Additional Information and Support	
Beam online documentation	www.suitabletech.com/documentation/
Beam online support	www.suitabletech.com/support/